

Online Lessons With Zoom

Zoom System Requirements For Windows:

Windows 11*

***Note: Windows 11 is supported on version 5.9.0 or higher.**

Windows 10*

***Note: Devices running Windows 10 must run Windows 10 Home, Pro, or Enterprise. S Mode is not supported.**

Windows 8 or 8.1

Windows 7

Supported browsers:

Edge 12+, Firefox 27+, Chrome 30+

Processor and RAM requirements:

**Minimum Processor:
Single-core 1Ghz or higher**

**Recommended Processor:
Dual-core 2Ghz or higher (Intel i3/i5/i7 or AMD equivalent)**

**Ram:
4Gb**

Bandwidth Requirements:

For 1:1 video calling:

 
For high-quality video: 600kbps (up/down)

For 720p HD video: 1.2Mbps (up/down)


For 1080p HD video: 3.8Mbps/3.0Mbps (up/down)

Recommended Online Gear Setup


- 1) A hardline connection from your computer-(a) to your high-speed internet modem-(o) using a ethernet cable-(b).

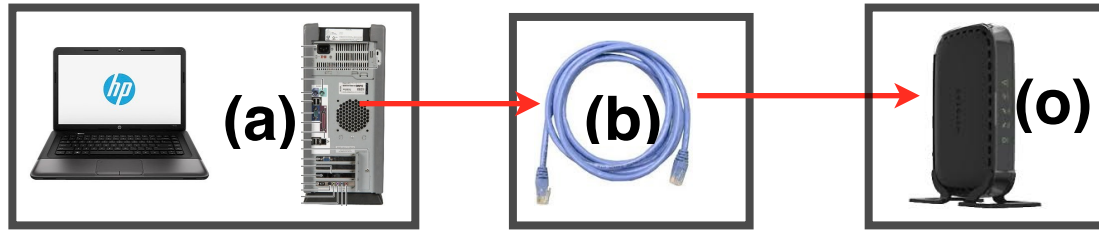

 
- 2) A connection from an external webcam-(c) to your computer-(a).

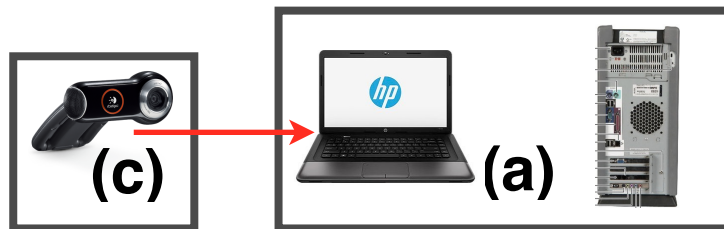

 
- 3) A audio connection from your mixer-(d) to your computer-(a) using the usb cable that comes with the mixer.

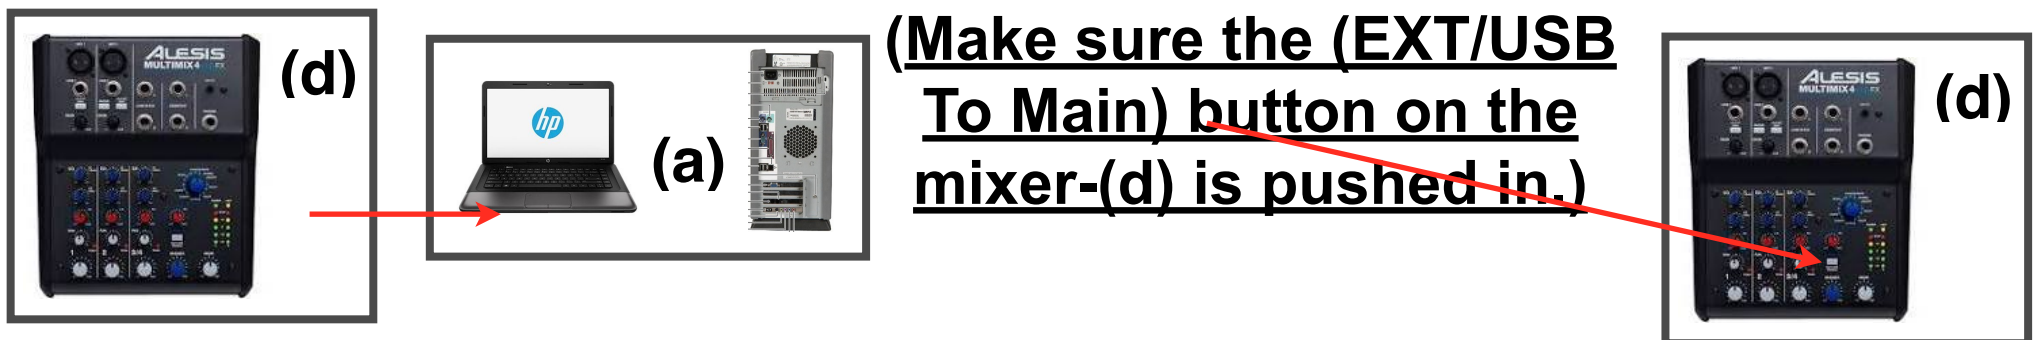

 
4) (Optional) - A connection from your computer-(a) to an External monitor-(e) with either a DVI, VGA, or a HDMI connection-(o).

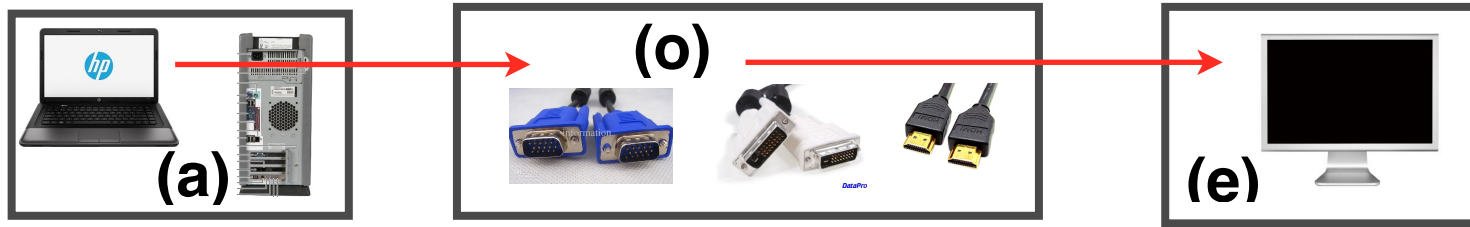

 
5) Your voice microphone-(f) with a XLR connection-(k) plugged it into channel 1 of the mixer-(d) should be the only live mic you should use during the lessons. This will allow you to balance your voice volume with the other audio for you and the teacher.
I recommend a regular vocal microphone on a stand.

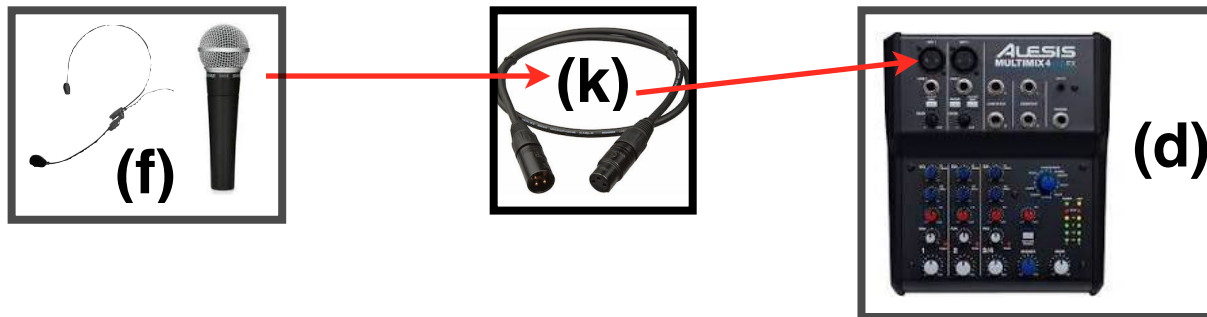

 
6) You should plug your bass-(g) into the input of channel 2 on your mixer with a standard 1/4 inch instrument cable-(L) or an XLR cable-(k) if you are using a direct box-(n).

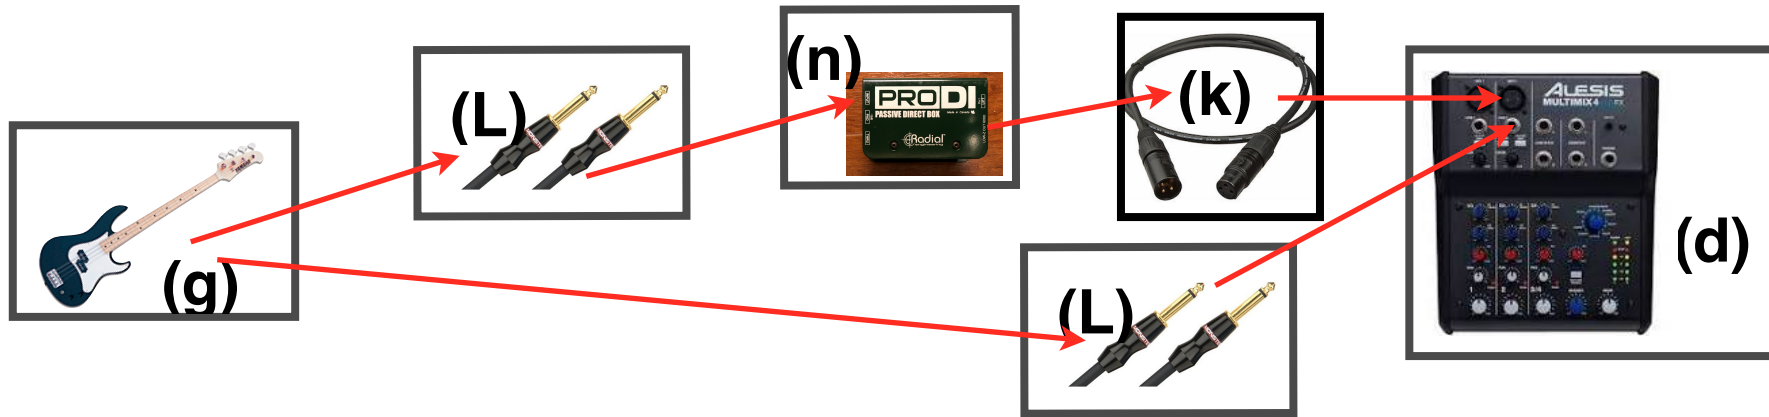

 
7) Your headphones-(h) should be used to listen to all of the audio during the lesson. Plug your headphones into the (1/4 inch) headphone jack on your mixer and adjust your headphone volume from the headphone volume control on your mixer-(d) (Bottom blue knob on the right)

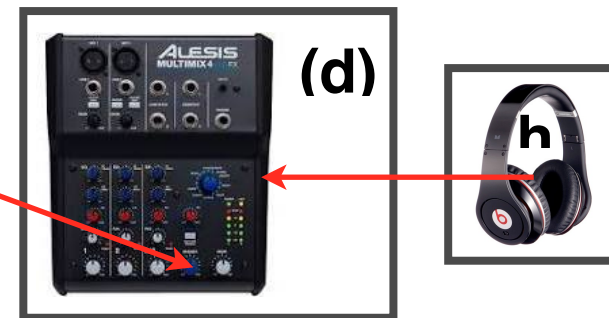

 
8) You should connect from your audio playback device-(i) using whatever audio connection is needed from your phone or tablet split to 2 mono 1/4" cables-(m) into the line in 3/4 L/R input channels of your mixer-(d).

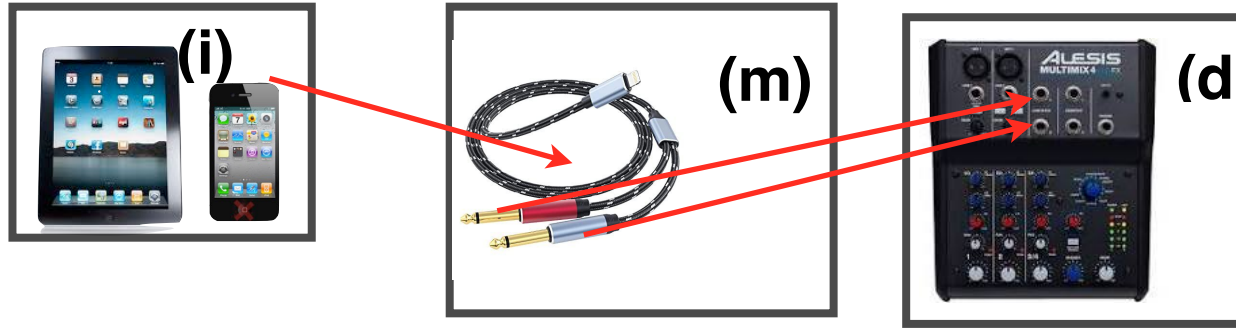

 9) I recommend using a separate audio playback device-(i) that can run apps such as the *Amazing Slow Downer*-(j) - <http://www.ronimusic.com> and the *Tempo Metronome App*-(j) - <http://www.frozenape.com/tempo-metronome.html>

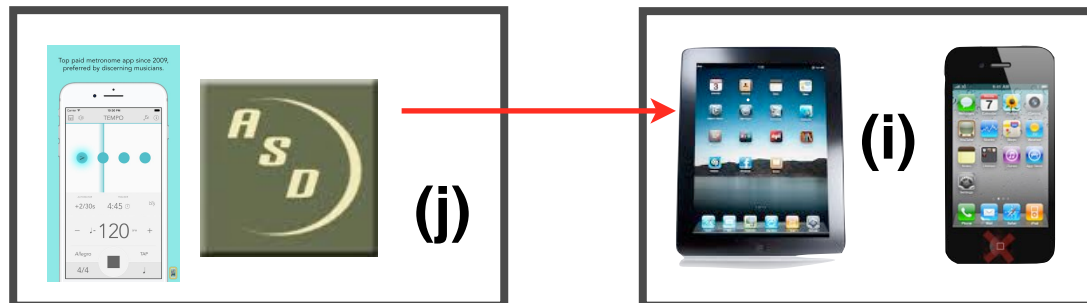

 PC Audio Hook Diagram For Zoom Mixer View

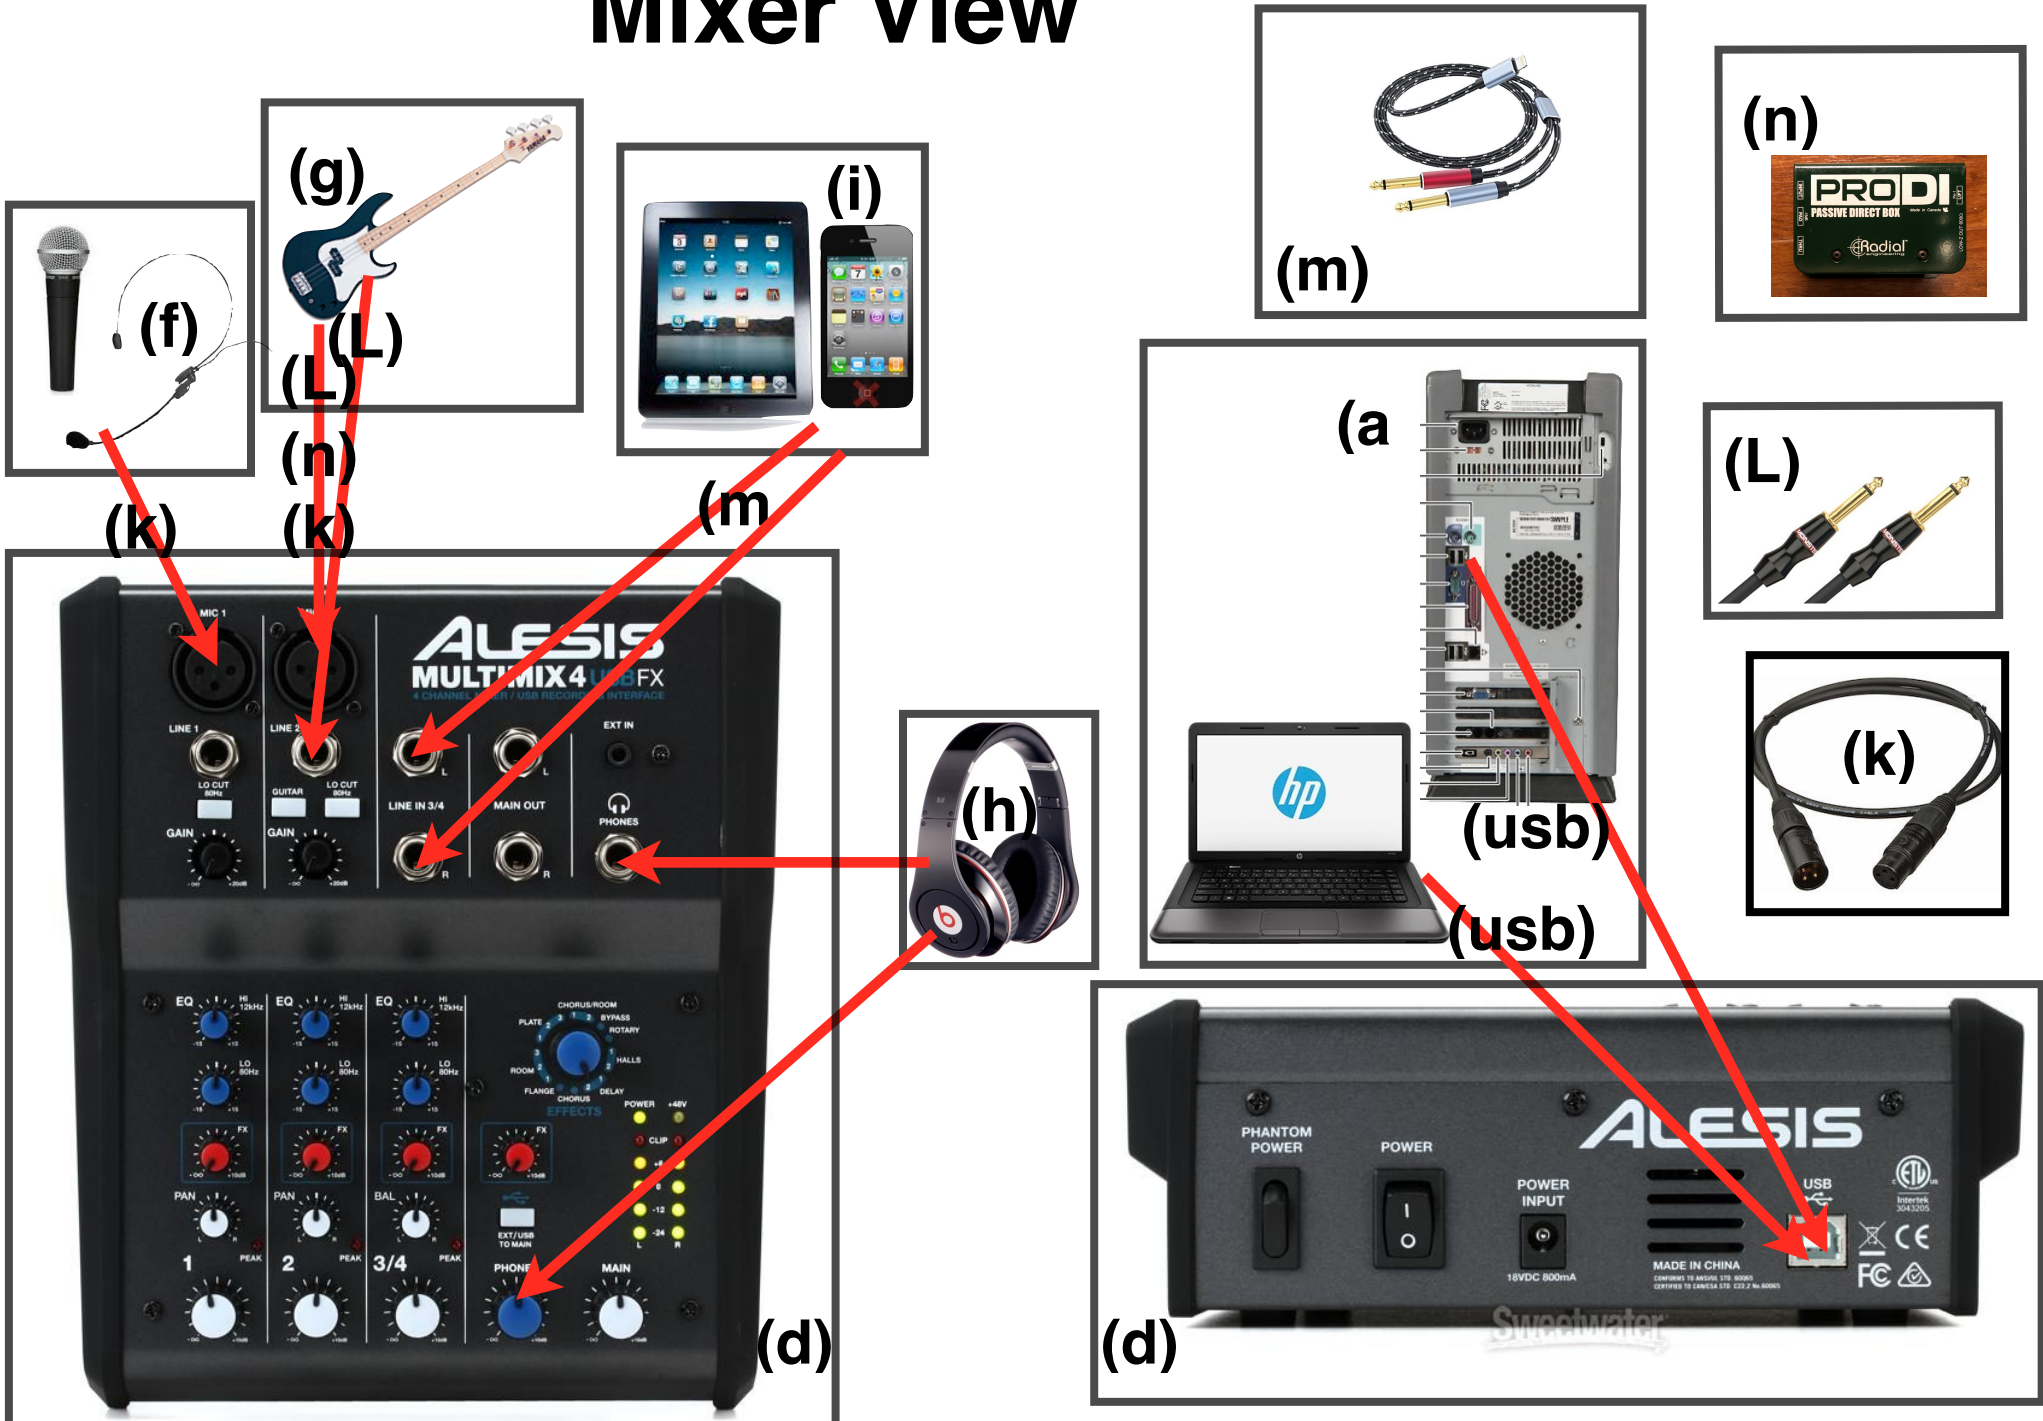

PC Audio Hook Up Diagram For Zoom: Laptop And Tower View

**USB Connection From
The Mixer-(d) To The
USB Port Of The
Computer-(a)**



**USB Connection From
The Mixer-(d) To The
USB Port Of The
Computer-(a)**



 
Recommended For A Better Lesson Experience

- 1) Your External webcam-(c) should be mounted away and up on a stand pointing at a downward angle towards you. The camera in your computer will work, but has a limited field of view.**
- 2) Using an external monitor-(e) although optional will allow you to view pdf files and other materials while also being able view the instructor. You will need to make sure you have the necessary adapter to connect from your computer, usually it will be a HDMI connector.**
- 3) For the fastest internet possible, it is best to use a hard line connection using a ethernet cable from your modem to your computer. (*Wifi Usually Does Not Work As Well*).**
- 4) Use a USB Hub if your computer does not have enough or the right kind connection ports.**
- 5) Store lesson videos and curriculum on a separate hard drive to save space in your computer which will help it run better.**

Windows 10 Computer Settings


Type “Control Panel” into search box next to the “Start Menu Icon” and select the “Control Panel App”

(Picture #1)

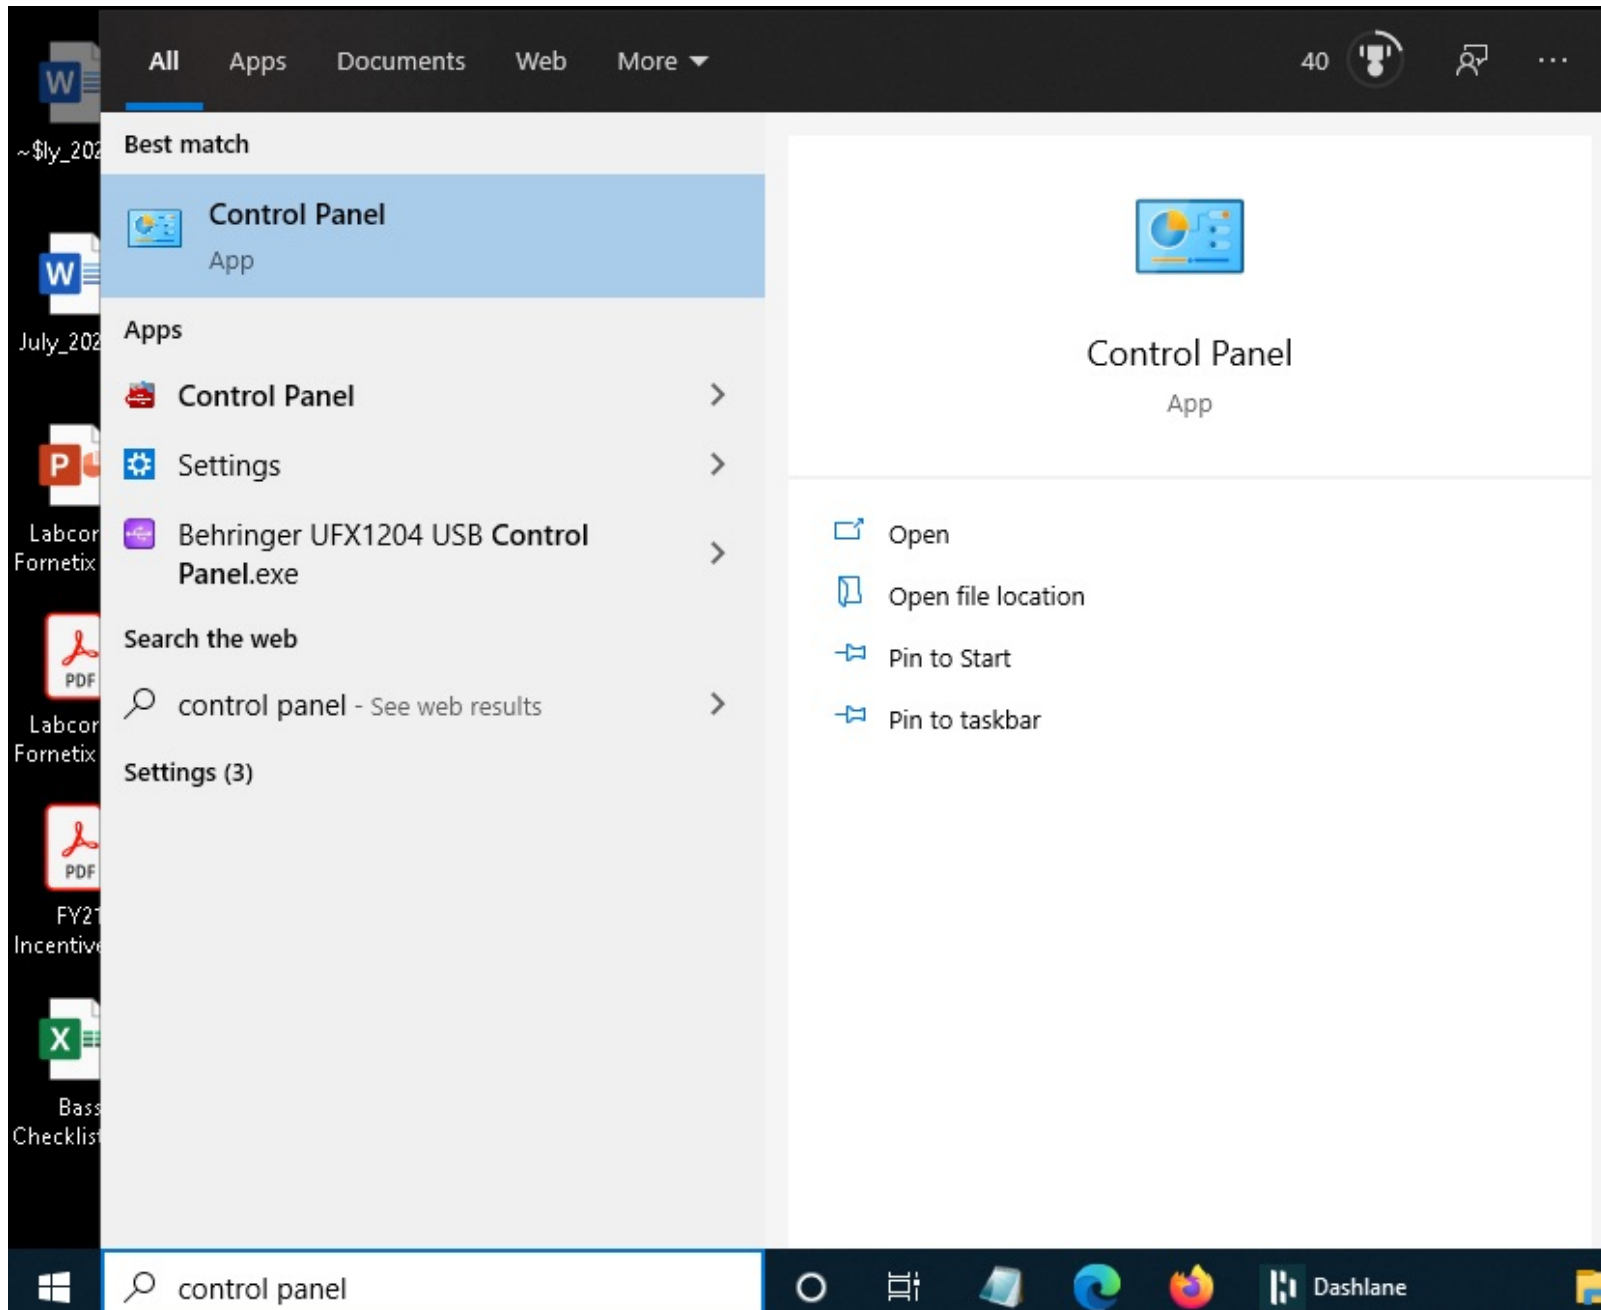


Windows 10 Computer Settings

 If your computer shows the “Category View” select “Hardware and Sound” then you can go to (Picture #1) and make your adjustments

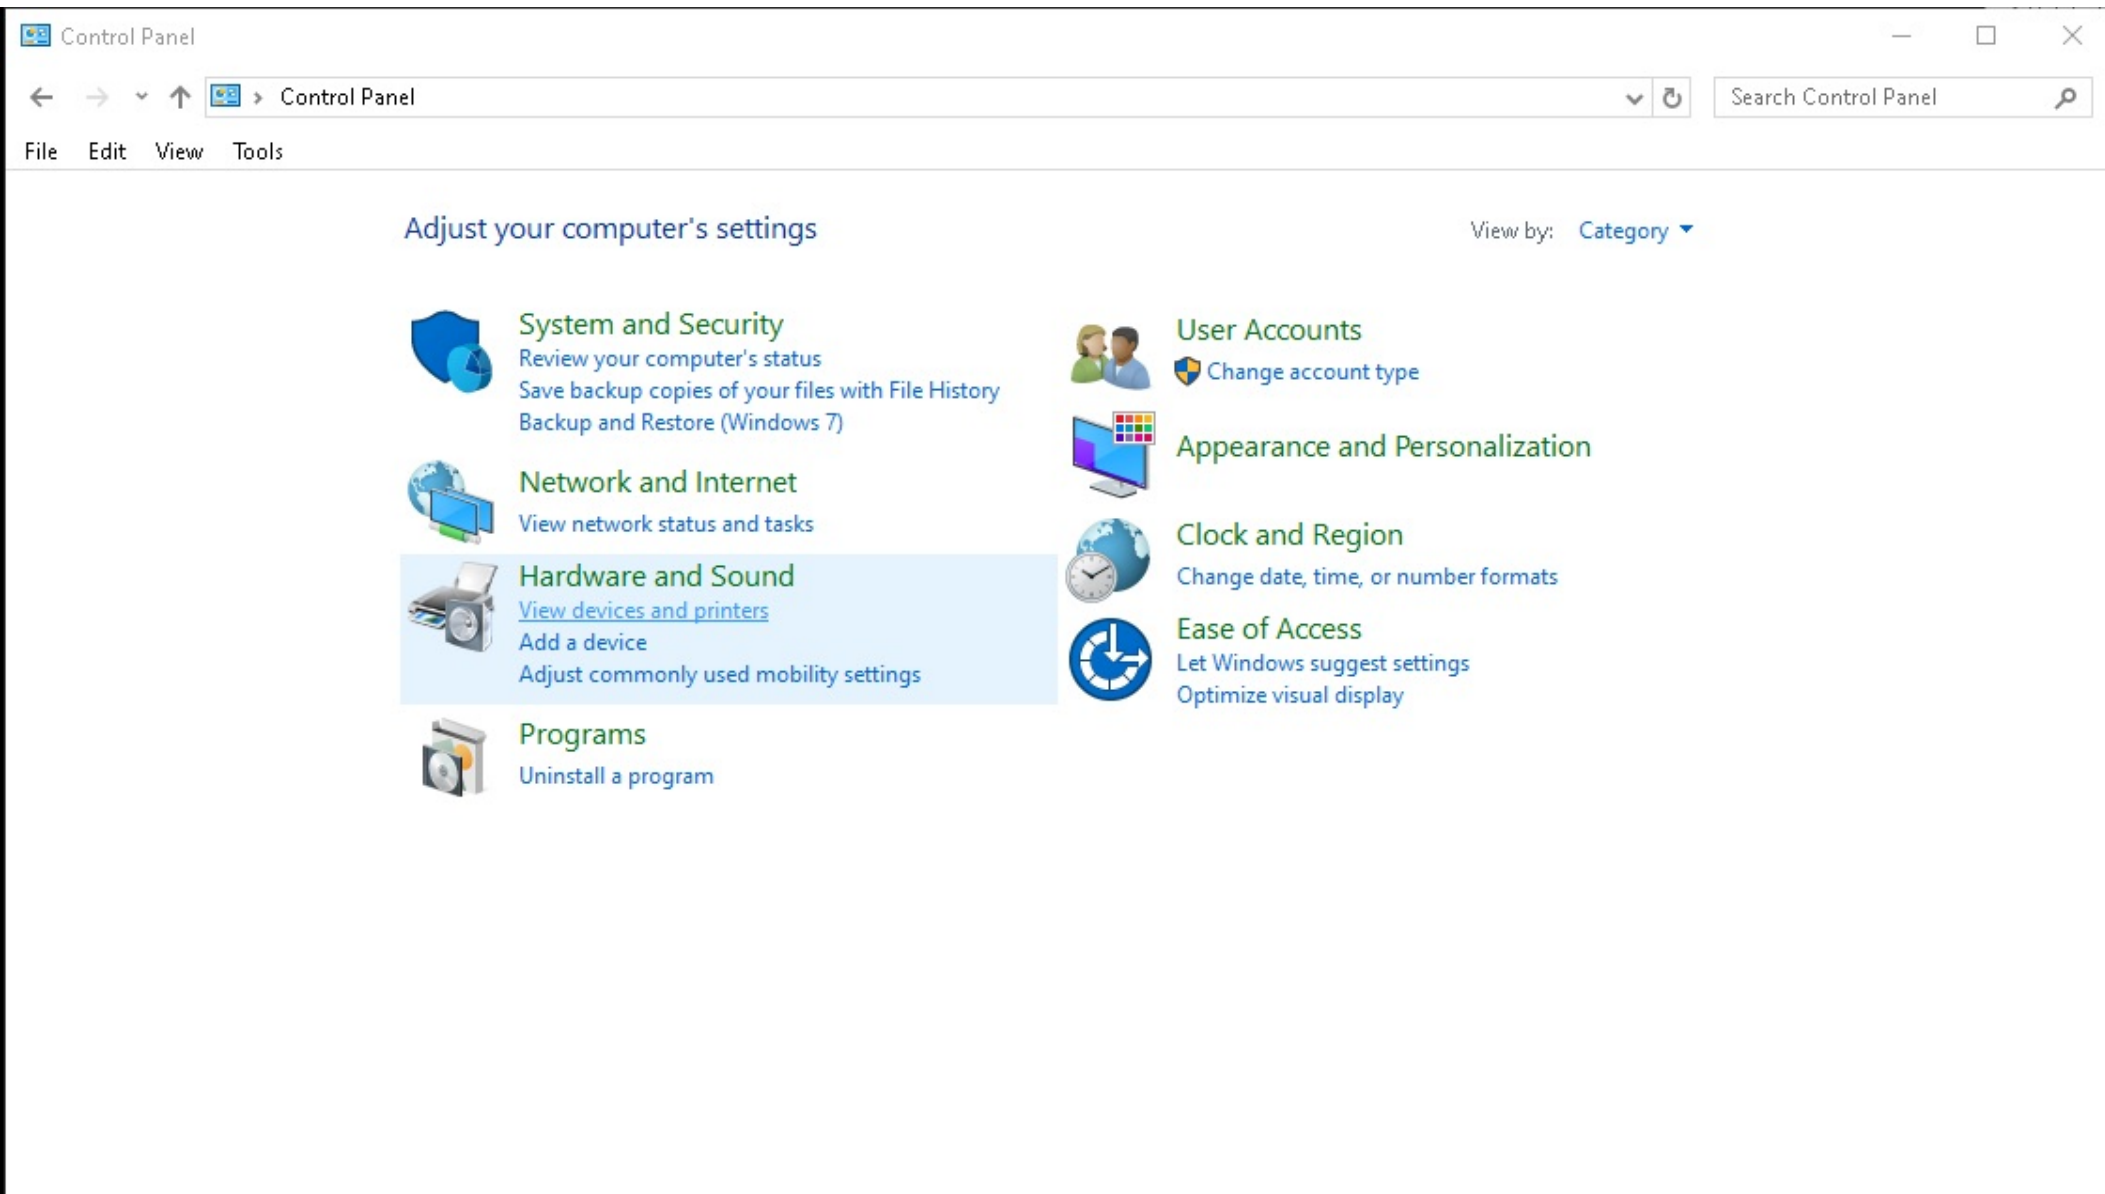


Windows 10 Computer Settings

 If your computer shows the “Icon View” (Sound Picture) select “Sound” then you can go to (Picture #1) and make your adjustments

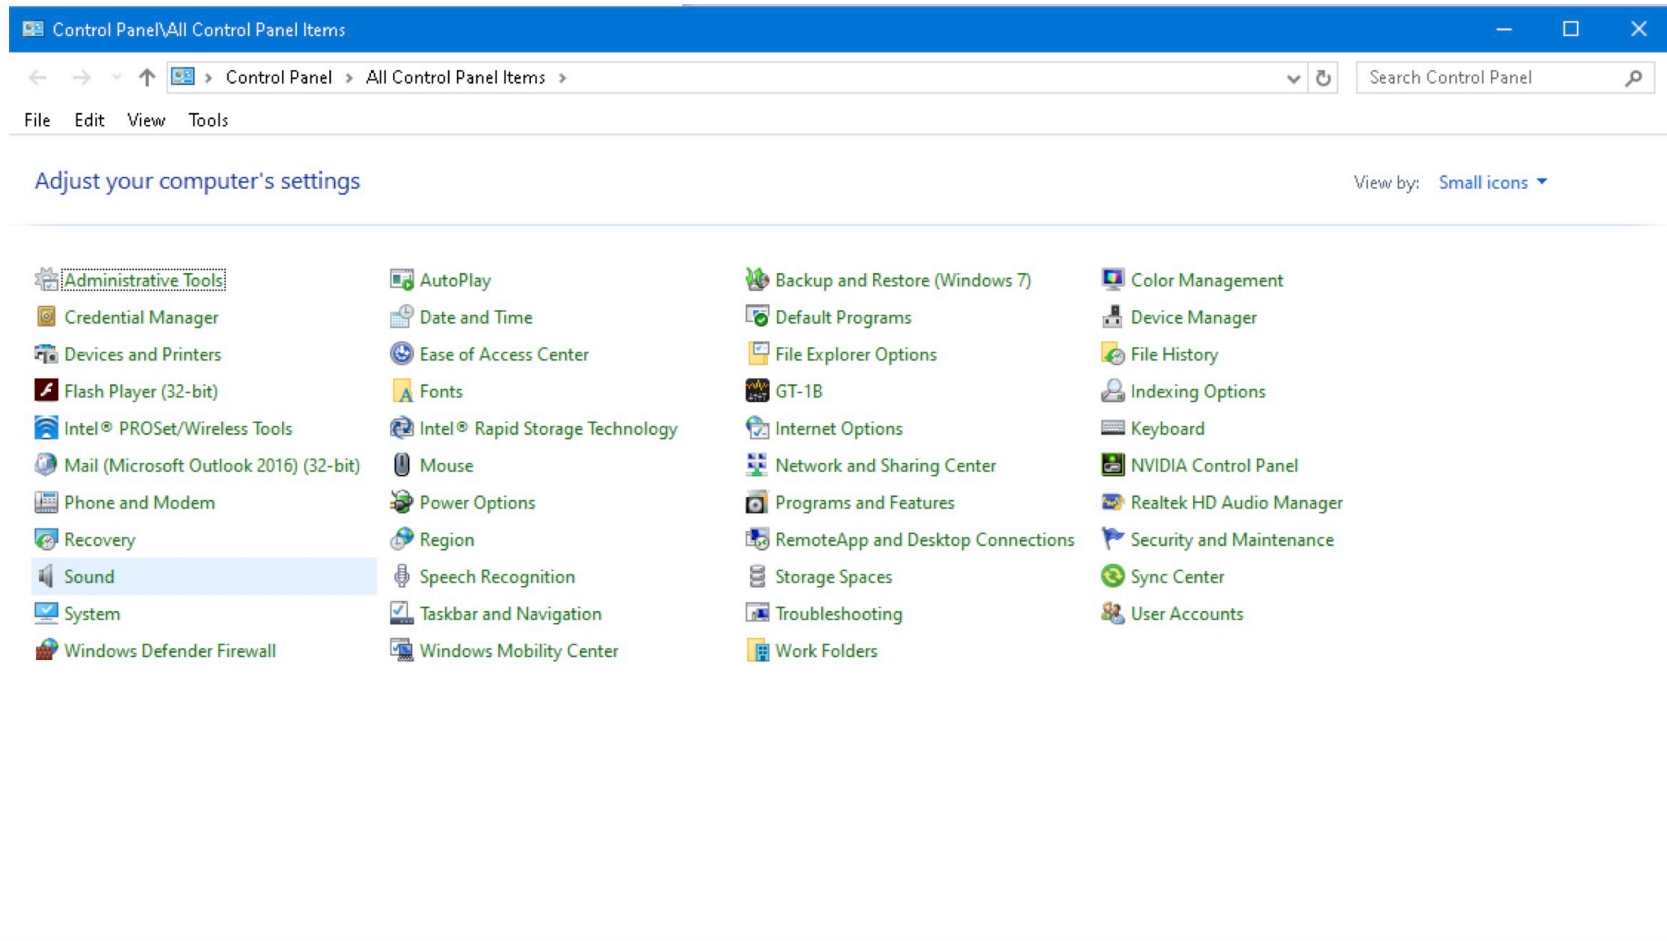

 This Is What Your Audio Settings Should Look Like In Your Zoom Settings

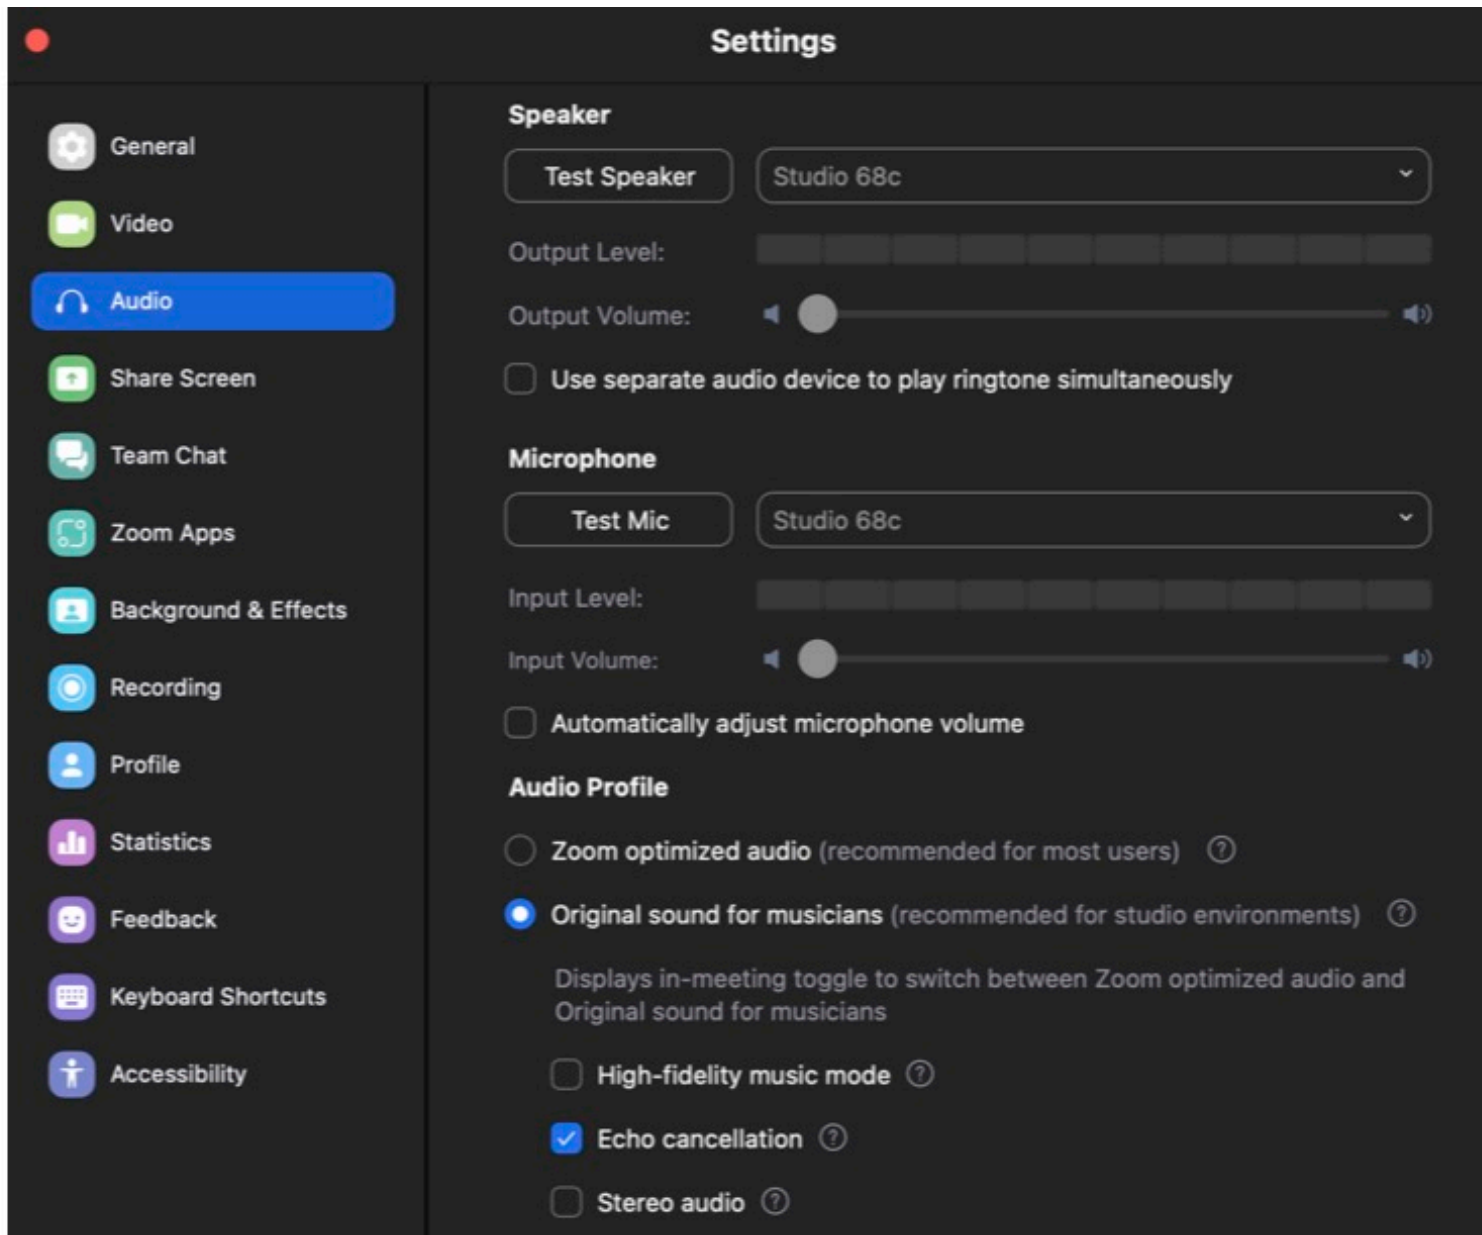

Recommended Audio Gear For Lessons

Alesis Multimix 4 USB FX Mixer with USB & Effects

\$149.00 At Sweetwater

<https://www.sweetwater.com/store/detail/MultiMix4FX--alesis-multimix-4-usb-fx-mixer-with-usb-and-effects>

Behringer U-Phoria UMC404HD USB Audio Interface

\$179.00 At Sweetwater

<https://www.sweetwater.com/store/detail/UMC404HD--behringer-u-phoria-umc404hd-usb-audio-interface>